

Values (Switches)

Switch values

Object of *Switch* type can get the following values in D2000 system.

Value	Cause
Q_Trans	Change of quadrat value from TRUE into FALSE or vice-versa.
Q_Off	False value.
Q_On	True value.
Q_Err	Invalid (illegal) value.
Q_Osc	Oscillating value (True <-> False).

Description of individual [flags](#) (user attributes) of values of **Switch** type objects.

Flag	Meaning
FA	Blockade A enabled manually (from control window).
FB	Blockade A enabled by control object.
FD	Blockade B enabled by control object.
FE	Transition state - turning on.
FF	Transition state - turning off.
FG	Transition state - backup turning on.
FH	Normal state - ON.
FI	Normal state - OFF.



Related pages:

[Switches](#)

[Switches - configuration dialog box](#)