

CNT_GETKEY

CNT_GETKEY action

Declaration

```
CNT_GETKEY _hContainer, _index, _key
```

Parameters

_hContainer	in	Unique identifier of <i>Int</i> type - data container.
_index	in	Consecutive number of an item (from 1...) of array that was created by CNT_CNVTOARRAY .
_key	out	Value of key from a container.

Description

The action reads the value of key of an item from [data container](#), which is defined its consecutive number (parameter *_index*) and inserts it into the parameter *_key*. The parameter *_key* must be the appropriate type. The parameter *_index* may be a value in the range 1...*_nr*. Parameter *_nr* may be acquired by calling [CNT_GETNR](#).

Example

[Work with data container \(the actions CNT_...\)](#).



Related pages:

[Script actions](#)