

StructStatAVG

%StructStatAVG function

Function

The function calculates the average value from valid values of the given structure variable column. Row range is defined by the parameters *first_row* a *last_row*.
The result is a real number.

Declaration

```
REAL %StructStatAVG(  
    in StructVar^Column,  
    INT in first_row,  
    INT in last_row  
)
```

Parameters

StructVar	Structured variable.
Column	Structured variable column.
first_row, last_row	Range of rows in the column.

Note

The function sets the user flags for result value as a sum of user flags of individual source values.

Example

```
%StructStatAVG(SV.Structure^Int, 4, 6)
```



Related pages:

[Implemented functions](#)
[Function arguments - types](#)