

# Log Off from Server

## D2000 System Console - log off from the server

To log off from a server, right-mouse click the server name in the [list of redundant groups, servers and processes](#) and select the item **Disconnect** from the open [menu](#).



Related pages:

[D2000 System Console - controlling servers](#)