

Init

Declaration

unsigned int _stdcall Init(struct InitParams * InPar)

Parameters

InPar	Pointer to InitParams structure.
-------	--

Description

The function **Init** (`_Init@4` in the *Stdcall* call convention) is required and called by the [D2000 KOM](#) process as the first function of protocol DLL. Using a *InitParams* structure, the function *Init* transfers the addresses of call-back functions and current version of interface definition.

Return code

Code	Description
InitOK	The initialization has been executed.
InitBadVer	Incorrect version of interface definition.
InitERR	Other error.



Related pages:

[D2000 KomAPI - interface functions](#)