

ExitProc

Declaration

```
void __stdcall ExitProc(void)
```

Description

ExitProc (`_ExitProc@0` in Stdcall convention) is called before stopping the **D2000 KOM** process (stopping the **D2000 KOM** process by the user, stopping the **D2000 Server**). The function handle should be as quick as possible. You should realize that the D2000 System may not be functioning and any use of **call-back functions** could be incorrect.



Related pages:

[D2000 KomAPI - interface functions](#)