

InitPoint

Declaration

```
unsigned int _stdcall WritePointValue(struct PointPar * Pt, unsigned int *FastAdr, unsigned int * RdValue)
```

Parameters

Pt	Pointer to PointPar structure.
FastAdr	I/O tag address converted to a 32-bit number.
RdBack	Pointer to a Boolean value of the request attribute of the function ReadPointValue . The function ReadPointValue is called after finishing the I/O tag initialization.

Description

The function **InitPoint** (`_InitPoint@12` in the Stdcall calling sequence) is optional. A pointer to a *PointPar* structure with a definition of the [I/O tag](#) parameters is the parameter of the function. The function is called at starting of the [D2000 KOM](#) process and later after a change of the [I/O tag](#) parameters in the [D2000 CNF](#) process. If it is required to save the [I/O tag](#) address converted to a 32-bit number into the list, the numerical address is to be saved into the parameter *FastAdr*. If the address is not converted, the constant *FastAdrNotUsed* is saved into the parameter *FastAdr*. For more info on addresses see the topic [addresses of stations and I/O tags](#).

Return code

Code	Description
RQ_OK	Request has been executed.
RQ_ERR	An error occurred (device does not communicate or is out of order, or there is any error).
RQ_IGNORED	The function was ignored and the station status is not changed.



Related pages:

[D2000 KomAPI - interface functions](#)