

# HI\_SetPictureScroll

## %HI\_SetPictureScroll function

### Function

Function **%HI\_SetPictureScroll** sets the value of the upper left point of zooming scheme on axis XY.

### Declaration

```
%HI_SetPictureScroll(  
    INT in _x,  
    INT in _y  
)
```

### Parameters

_x	Value of the upper left point of zooming scheme on axis X.
_y	Value of the upper left point of zooming scheme on axis Y.

### Note

This function is available also in [%HIX\\_ version](#).



#### Related pages:

[Active picture manipulation functions](#)  
[Function arguments - types](#)