

# Specific displaying of HI

When starting HI, there is a possibility to display only a desktop. To set such a displaying, you should enter the start parameter `--fullscreen` and a bitmap "D2000\_FS.bmp" into a folder *resdll*, which is placed in the [installation directory](#) of D2000. This feature may be combined with starting [HI on separate windows desktop](#), start parameter `/M` (locked HI) and capability of HI to run without [D2000 Server](#) (see [HI in redundant systems](#)).

When starting, HI is opened on full screen with bitmap *D2000\_FS.bmp*. After connecting to [D2000 Server](#), only desktop is displayed. If HI can run without connecting to **D2000 Server**, after the loss of connection, the bitmap *D2000\_FS.bmp* is reopened but the message with information on [loss of connection](#) is not displayed. User cannot stop the process from HI.

In a such situation, the only possibility to stop HI is restarting a workstation.