

HI_GetHiSizeY

%HI_GetHiSizeY function

Function

The function %HI_GetHiSizeY gets back the vertical window size of the process HI .

Declaration

```
INT %HI_GetHiSizeY()
```

Parameters

No parameters.

Description

The function gets back the vertical window size of the process HI.

**Related pages:**

- [Active picture manipulation functions](#)
- [Picture local variables](#)
- [Function arguments - types](#)