

XML Export

XML Export is the means to export of the object configuration in the form of XML file.

XML Export can be started:

- from [D2000 CNF](#)
 - choose the item **Export to ...** from the popup menu activated over [the list of objects](#)
 - click on the button  from the tool bar in the dialog box [Object dependency](#)
 - choose the item [XML Export of complete configuration](#) from [Object](#) menu
- from process [D2000 Event Handler](#) by ESL function [%XML_ExportD2ObjToDocument](#)

XML Export saves the object configuration into XML files with the name `<object_name>.xml`. Also the binary files with the `bin` suffix are created for some objects. They contains an additional data of objects. These files are necessary for [XML Import](#). More detail information on binary data of XML file is mentioned in a description of [properties of SDT_RAW_DATA type](#).

The result of **XML Export** is influenced by the setting of [export parameters](#):

Parameter	Export from processes	ESL function	XML Export of complete configuration
<code>WITH_CHILD</code>	XML settings (dialog box).	always OFF	OFF
<code>WITH_REFER</code>		always OFF	OFF
<code>WITH_DREFS</code>		always OFF	OFF
<code>FILE_TIME</code>		OFF or set	ON
<code>CHECK_EXP</code>		ON or set	ON
<code>ZERO_HOBJ</code>		OFF or set	OFF
<code>SYS_VARS</code>		OFF or set	ON
<code>UTF8_ENC</code>		always ON	ON
<code>GROUP_SOFT</code>		OFF or set	OFF
<code>SUBDIR_EXP</code>		OFF or set	ON
<code>EXP_LOGS</code>		OFF or set	OFF
<code>NORM_D2REC</code>		OFF or set	OFF
<code>NULL_PAMED</code>		OFF or set	OFF
<code>EXP_PURE</code>		OFF or set	OFF

Note: XML Export does not export [object life logs](#) of CVS type into XML files even if the export parameter `EXP_LOGS` is ON.



Related pages:

[D2000 XML](#)
[Export parameters](#)
[XML settings](#)