

DeleteStation

Declaration

```
unsigned int _stdcall DeleteStation(struct StationPar * St)
```

Parameters

St	Pointer to StationPar structure.
----	--

Description

The function **DeleteStation** (`_DeleteStation@4` in the *Stdcall* call convention) is optional. It is called if particular station is being deleted in the [D2000 CNF](#) process.

Return code

Code	Description
RQ_OK	Request has been executed.
RQ_ERR	An error occurred (device does not communicate or is out of service, or there is another error).
RQ_IGNORED	The function was ignored and the station status is not changed.



Related pages:

[D2000 KomAPI - interface functions](#)