

XML Update

XML Update is the means to update a part of object configuration en masse by XML files.

XML instruction defines which part of object configuration will be changed.

XML filter decides which objects will be changed.

XML Update can be started:

- in D2000 CNF select the item **Objects \ XML Update** from the main menu, it opens a standard dialog box to select the files - **XML instructions**, whereas **XML filters** will be searched in the same folder
- from process **D2000 Event Handler** by ESL function **%XML_UpdateObjects**

If XML Update runs on the client process and **XML Repository** is in active status or **Automatic XML Export after object save** is checked off the export will be transferred to directory intended for an automatic export.

The setting of **import parameters** influences a result of **XML Update**:

Parameter	Update form client process	ESL function
DB_ASYNC	OFF	ON or set
UID_STRICT	ON	ON or set
UID_USEXML	OFF	OFF or set
IGNR_CHECK	OFF	OFF or set
UPD_VARS	ON	ON or set
GROUP_ADD	ON	ON or set

Note:

If **UID_STRICT=OFF** or **UID_USEXML=ON** is not important at XML Update because the objects from configuration have been already changed according to a filter. The object name or UID is not changed.



Related pages:

- [D2000 XML](#)
- [Import parameters](#)
- [Import from CNF](#)
- [XML filter specification](#)
- [XML instruction](#)
- [Description of XML Update](#)