

Configuration of Installation (Linux)

The file with configuration parameters of the installed D2000 instance is located in

<install_directory>/instance.properties

where <install_directory> is the directory in which the installed D2000 instance located in.

The file is in text format, individual parameters are stored in the form *key = value*. The meaning of the parameters is described in the [Location of Configuration Parameters](#) chapter.

The content of the file corresponds to the key [**HKEY_LOCAL_MACHINE\SOFTWARE\pesoft\<instance_name>**] in the Windows platform registry the hierarchical (tree) structure of information is expressed by the delimiter '.' (period) in the key name.

instance.properties

```
#####
AppDir=/opt/d2000/app
InstallDir=/opt/d2000
IPAddr1 = 192.0.2.1
IPAddr2 = 192.0.2.2
IPMask = 255.255.255.0
Log_Dir = /opt/d2000/log
Debug_Dir = /opt/d2000/log
Perf_Dir = /opt/d2000/log
HWInfoBasedKey = 1
...
```