

GetValueStatusStr

GetValueStatusStr function

Function

The function converts a string, which is returned by DDE references "D_2000|STATUS!objname" and "D_2000|ARCH_STATUS!bName" into clear text format. The result is a status of object value.

Declaration

```
= GetValueStatusStr(DDEreference)
```

Parameters

DDEReference	DDE reference in the format D_2000 STATUS!objname or D_2000 ARCH_STATUS!bName .
--------------	---

Return value

Return values are defined by Declaration sheet - "Texts describing a value limit".

Normal	Valid value.
Undefined	Undefined value.
Out of Range	Value is out of range.
Error	Error.
Div by Zero	Dividing by zero.

Example

```
= GetValueStatusStr(D_2000|STATUS!U.Kx_O2_Ref_Plyn)
```



Related pages:

[Implemented functions](#)