

Interval for Logging the System

Interval for logging the system

In case that no predefined time period is suitable to log the system event (last hour, last 8 hours, etc.), user can define his/her own interval.

To set an user defined time interval

1. Select the **Exactly** radio button in the [System Logging - Settings](#) dialog box.
2. The following dialog box allowing the user to define a time interval is opened.

The screenshot shows a dialog box titled "Enter time interval". At the top, there are two text input fields for dates and times: "04.02.2010 00:00" and "13.02.2010 24:00". A yellow box with the number "3" is placed over the first field. Below these fields are two calendar widgets. The first calendar is for February 2010, with a yellow box labeled "1" over the 28th. The second calendar is for March 2010, with a red box labeled "4" over the 4th and a yellow box labeled "2" over the 31st. At the bottom of the dialog are "OK" and "Cancel" buttons.

3. In the calendar (1), select the required month and year of the time interval beginning (click the items showing year and month). The red item (4) shows the current date.
4. In the calendar (2) select the required month and year of the time interval end.
5. In the calendar (1) click a day - the time interval beginning and hold down the mouse button.
6. In the calendar (2) click a day - the time interval end and release the mouse button.
7. Time interval may be also defined in the input fields (3) showing required time parameters (3).
8. To confirm your settings click the **OK** button.

Note:

Time interval within one month can be defined in one of the calendars.