

HI_GetUserRFID

%HI_GetUserRFID function

Function

The function returns the string that represents RFID tag of logged on user in [D2000 HI](#).

Declaration

```
TEXT %HI_GetUserRFID( )
```

Parameters

No parameters.

**Related pages:**

[Active picture manipulation functions](#)

[Function arguments - types](#)