

HI_LayersParams

%HI_LayersParams function

| | | | | | |
|-------------|--|-------|-------------|-----|-----------|
| Function | <p>The function sets the object attributes for individual layers from the script - layers range in which the parameters of graphic object will be set. Attributes can be set for current layer, all layers or range of layers.</p> <p>The function defines layers for relevant %HI_Set* functions.</p> | | | | |
| Declaration | <pre>%HI_LayersParams(INT in _fromL [,INT in _toL])</pre> | | | | |
| Parameters | <table><tr><td>fromL</td><td>From layer.</td></tr><tr><td>toL</td><td>To layer.</td></tr></table> <ul style="list-style-type: none">• _fromL = 0; _toL = value it is not important - attributes are set on current / visible layer• _fromL = -1; _toL = value it is not important - attributes are set on all layer | fromL | From layer. | toL | To layer. |
| fromL | From layer. | | | | |
| toL | To layer. | | | | |
| Note 1 | Using %HI_Get* function the parameters are set from current layer. | | | | |
| Note 2 | This function is available also in %HIX_version . | | | | |



Related pages:

- [Active picture manipulation functions](#)
- [Function arguments - types](#)