

# HI\_EnableInOutVariables

## %HI\_EnableInOutVariables function

---

### Function

The function enables/disables transferring the local input-output variables of the active picture when the picture is being closed.

### Declaration

```
%HI_EnableInOutVariables(  
    BOOL in bEnable  
)
```

### Parameters

<b>bEnable</b>	@TRUE - enable transfer. @FALSE - disable transfer.
----------------	--

### Note 1

For more information on input-output local variables see the topic [Picture local variables](#).

### Note 2

This function is available also in [%HIX\\_ version](#).

---



#### Related pages:

[Active picture manipulation functions](#)  
[Function arguments - types](#)