

HI_GetCurrLayer

%HI_GetCurrLayer function

Function

The function finds out the currently displayed layer - gets back the number of current layer.

Declaration

```
INT %HI_GetCurrLayer()
```

Parameters

No parameters.

Note

This function is available also in [%HIX_ version](#).

**Related pages:**

[Active picture manipulation functions](#)
[Function arguments - type](#)