

# HI\_SetLayoutManagement

## %HI\_SetLayoutManagement function

Function

The function changes the settings for [layout manager](#) in a graphic object.

Declaration

```
%HI_SetLayoutManagement(  
    INT in _refId,  
    INT in _manageX,  
    INT in _manageY[,  
    BOOL in _zoom]  
)
```


Parameters	
<b>_refId</b>	Reference to a graphic object ( <a href="#">reference variable</a> ).
<b>_manageX</b>	Settings for layout manager - X axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)
<b>_manageY</b>	Settings for layout manager - Y axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)
<b>_zoom</b>	Optional parameter. Settings for layout manager for the zoom parameter. Possible values: - <i>blank</i> - value of zoom parameter does not change - <i>@TRUE</i> - parameter zoom is set to true - <i>@FALSE</i> - parameter zoom is set to false

Description

The function changes the settings for layout manager in a graphic object.

Example

```
%HI_SetLayoutManagement(_refId, 2, 2)
```

 **Related pages:**

[Active picture manipulation functions](#)  
[Function arguments - types](#)  
[Layout manager](#)