

HI_SetZoom

%HI_SetZoom function

Function	The function sets ZOOM and Layer according to zoom from the scrip.						
Declaration	<pre>%HI_SetZoom(REAL in _scale, INT in _x, INT in _y)</pre>						
Parameters	<table><tr><td>scale</td><td>Zoom out / zoom in toward the drawing ratio 1:1.</td></tr><tr><td>x</td><td>X co-ordinate of the required zoom centre.</td></tr><tr><td>y</td><td>Y co-ordinate of the required zoom centre.</td></tr></table>	scale	Zoom out / zoom in toward the drawing ratio 1:1.	x	X co-ordinate of the required zoom centre.	y	Y co-ordinate of the required zoom centre.
scale	Zoom out / zoom in toward the drawing ratio 1:1.						
x	X co-ordinate of the required zoom centre.						
y	Y co-ordinate of the required zoom centre.						
Note 1	ZOOM is adjusted according to visibility of the close-up view from Picture and the area out of Picture will not be displayed. Setting the parameters -1, -1, the actual co-ordinates of Picture centre will be unchanged.						
Note 2	This function is available also in %HIX_version .						



Related pages:

- [Active picture manipulation functions](#)
- [Function arguments - types](#)