

HI_GetColumnMasterEditable

%HI_GetColumnMasterEditable, %HI_SetColumnMasterEditable functions

Function	<p>The %HI_SetColumnMasterEditable function disables to change a text in the column in the display of Browser type (overloads the function %HI_SetEditEnable) / cancels the overloading and enables to change the text in particular column as defined by the function %HI_SetEditEnable (control function).</p> <p>The %HI_GetColumnMasterEditable function gets the current status of overloading that is defined by %HI_SetColumnMasterEditable.</p>						
Declaration	<pre>%HI_SetColumnMasterEditable(INT in refId, INT in col, BOOL in bEnable) BOOL %HI_GetColumnMasterEditable(INT in refId, INT in col)</pre>						
Parameters	<table><tr><td>refId</td><td>Reference to graphic object (reference variable).</td></tr><tr><td>col</td><td>Column in Browser.</td></tr><tr><td>bEnable</td><td>@TRUE - enables the graphic object @FALSE - disables the graphic object</td></tr></table>	refId	Reference to graphic object (reference variable).	col	Column in Browser.	bEnable	@TRUE - enables the graphic object @FALSE - disables the graphic object
refId	Reference to graphic object (reference variable).						
col	Column in Browser.						
bEnable	@TRUE - enables the graphic object @FALSE - disables the graphic object						
Description	<p>The %HI_SetColumnMasterEditable function disables to change a text in the column in the display of Browser type - the parameter <i>refId</i> defines the name of the reference variable for Browser. When <i>bEnable</i> parameter is @FALSE, it overloads the %HI_SetEditEnable function (disables its functionality).</p> <p>The %HI_GetColumnMasterEditable function gets the current status of overloading of editing which is set by %HI_SetColumnMasterEditable. The return value @TRUE does not mean that the column can be edited, but the column fields are controlled by %HI_SetEditEnable. @FALSE means the functionality of %HI_SetEditEnable function is disabled and the text in the column object cannot be changed.</p> <p>The behavior of Master functions is described in the chapter Master functions.</p>						
Example	<pre>ENTRY OnLogOn(IN TEXT _userName, IN BOOL _bLogOn) IF _bLogOn THEN ;when a user is logged on, a text in column can be edited %HI_SetColumnMasterEditable(_Text,@TRUE) ELSE ;when a user is logged off, the access to a text in column is disabled %HI_SetColumnMasterEditable(_Text,@FALSE) ENDIF END OnLogOn</pre>						
Note	This function is also in %HIX_ version .						



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)