

HI_SetPictureScroll

%HI_SetPictureScroll function

Function

Function **%HI_SetPictureScroll** sets the value of the upper left point of zooming scheme on axis XY.

Declaration

```
%HI_SetPictureScroll(  
    INT in _x,  
    INT in _y  
)
```

Parameters

| | |
|-----------|--|
| _x | Value of the upper left point of zooming scheme on axis X. |
| _y | Value of the upper left point of zooming scheme on axis Y. |

Note

This function is available also in [%HIX_ version](#).



Related pages:

[Active picture manipulation functions](#)
[Function arguments - types](#)