

HI_SetGraphLineStat

%HI_SetGraphLineStat function

Function	The function sets the statistic function displayed in the Universal column for given object in the graph table (control function).						
Declaration	<pre>%HI_SetGraphLineStat(INT in refId, INT in lineNr, INT in statFunct)</pre>						
Parameters	<table><tr><td>refId</td><td>Reference (reference variable) to displayer of Graph type.</td></tr><tr><td>lineNr</td><td>Serial number of graphic flow.</td></tr><tr><td>statFunct</td><td>Type of statistic function. Possible values:<ul style="list-style-type: none">1 - minimum2 - maximum3 - last value4 - sum5 - averageNote: Value other than abovementioned disables the statistics, i.e. the Universal column will not show any value.</td></tr></table>	refId	Reference (reference variable) to displayer of Graph type.	lineNr	Serial number of graphic flow.	statFunct	Type of statistic function. Possible values: <ul style="list-style-type: none">1 - minimum2 - maximum3 - last value4 - sum5 - average Note: Value other than abovementioned disables the statistics, i.e. the Universal column will not show any value.
refId	Reference (reference variable) to displayer of Graph type.						
lineNr	Serial number of graphic flow.						
statFunct	Type of statistic function. Possible values: <ul style="list-style-type: none">1 - minimum2 - maximum3 - last value4 - sum5 - average Note: Value other than abovementioned disables the statistics, i.e. the Universal column will not show any value.						
Description	The function sets the statistic function specified by the parameter <i>statFunct</i> for object <i>lineNr</i> . Result if of the statistic function is to be shown in the table of displayer of Graph type (parameter <i>refId</i>) - the Universal column - for given object.						
Note	More information - the parameter Table columns in the configuration of graphs.						



Related pages:

- [Graphic object manipulation functions](#)
- [Function arguments - types](#)