

HI_SetGraphBarWidth

%HI_SetGraphBarWidth function

Function

The function sets bar width in a candlestick graph which is connected to displayer of [Graph](#) or [XY Graph](#) types ([Control function](#)).

Declaration

```
%HI_SetGraphBarWidth(  
    INT in refId,  
    INT in lineNr,  
    INT in width  
)
```

Parameters

refId	Reference to displayer (reference variable).
lineNr	Flow serial number.
width	Width in % or pixels (see description)

Description

The function sets bar width in the candlestick graph. If the period = 0, the parameter defines bar width of the period width as percentages. If the period = 0, the parameter defines bar width as pixels.

Example

```
%HI_SetGraphBarWidth(_Graph,1,20)
```



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)