

# HI\_SetBrowserStText

## %HI\_SetBrowserStText function

**Function** The function **%HI\_SetBrowserStText** sets the object of *Status text* type for field, row or column of the *Browser* displayer. A type of status text is determined by the object of *Status text* ([control function](#)).

**Declaration**

```
%HI_SetBrowserStText(  
    INT in refId,  
    INT in _row,  
    INT in _col,  
    HBJ in stText  
)
```

**Parameters**

<b>refId</b>	Reference to displayer ( <a href="#">reference variable</a> ).
<b>_row</b>	Row of the field.
<b>_col</b>	Column of the field.
<b>stText</b>	Reference to object <i>Status text</i> type.

**Description** The function sets the object of *Status text* type to specific item of *Browser* displayer. This setting can be cancelled by inserting 0 (zero) into the parameter *stText*.

**Example**

```
;status text setting for column No. 3  
%HI_SetBrowserStText (_browser, 0, 3, sttxt_Colors\HBJ)
```

```
;status text setting for field [2,3]  
%HI_SetBrowserStText (_browser, 2, 3, sttxt_Colors\HBJ)
```

**Note 2** This function is available also in [%HIX\\_ version](#).

 **Related pages:**  
[Graphic object manipulation functions](#)  
[Function arguments - types](#)