

HI_AXSetParam

%HI_AXGetParam, %HI_AXSetParam functions

Functions

The function **%HI_SetParam** sets the parameter defined by the serial number *index* to the value defined by the parameter *value*.

The function **%HI_GetParam** retrieves the value of the parameter defined by the parameter *index*.

Declaration

```
%HI_SetParam(  
    INT in index,  
    UNIVAL in value  
)  
  
UNIVAL%HI_GetParam(  
    INT in index  
)
```

Parameters

index	Parameter's serial number.
value	Parameter value to set.

 **Related pages:**

[ActiveX object manipulation functions](#)
[Function arguments - types](#)