

# HI\_SetIDispProp

## %HI\_GetIDispProp, %HI\_SetIDispProp functions

### Function

The function **%HI\_SetIDispProp** sets the given variable to the value defined by the parameter *value*.

The function **%HI\_GetIDispProp** returns the value of the given variable.

### Declaration

```
%HI_SetIDispProp(
    INT in IDispAddr,
    TEXT in variableName,
    in value
)

UNIVAL %HI_GetIDispProp(
    INT in IDispAddr,
    TEXT in variableName
)
```

### Parameters

IDispAddr	IDispatch interface address.
variableName	Name of the variable to set/read.
value	Value to set.

### Description

The function **%HI\_SetIDispProp** has no return value.

The function **%HI\_GetIDispProp** returns the value of the variable.



#### Related pages:

[ActiveX object manipulation functions](#)  
[Function arguments - types](#)