

# LNG\_GetCurrLngIdx

## %LNG\_GetCurrLngIdx function

**Function** The function returns the identifier of the current language.

**Declaration**

```
INT LNG_GetCurrLngIdx( )
```

**Parameters** None.

**Return value** Return value is **Int** type.

**Description** A current language is set by a registered user in context of [D2000 HI](#) process.  
In context of [D2000 EventHandler](#) process the language is set by called script in RPC procedure execution. In other case the language is undefined.



**Related pages:**

[ESL extended functions](#)  
[Function arguments - types](#)  
[%LNG Translate function](#)