

XML_GetLastErrorCode

%XML_GetLastErrorCode function

Function

The function returns the error code of the last XML operation.

Declaration

```
INT %XML_GetLastErrorCode()
```

Parameters

None.

Return value

Error code.

Description

Table of *error codes*:

Error code	Description
0	No error.
-1	Invalid handle.
-2	Error when opening the document.
-3	Error when saving the document.
-4	Invalid index in list.
-5	Handle to object required.
-6	Handle to element required.
-7	Handle to document or element required.
-8	Document does not satisfy the validation.
-9	Unknown / indefinite error.
-10	Error during XML action.
-11	Other XML Import transaction is being processed.

Example

```
INT _errorCode  
_errorCode := %XML_GetLastErrorCode()
```

**Related pages:**

[XML file manipulation functions](#)
[Function arguments - types](#)