

SetReceiveState

Declaration

```
void (_stdcall * SetReceiveState)(HOBJ StID);
```

Parameters

StID	station ID
------	------------

Description

Transition of a line into the status Receive. The function should be used after transmission (call-back function [WriteToLine](#)), if the "Custom" mode of the line of [Serial](#) or [MOXA IP Serial Library](#) category is being used.



Related pages:

[D2000 KomAPI - call-back functions](#)