

# SetStationStatus

## Declaration

```
void (_stdcall *SetStationStatus)(HOBJ StID, TStVal Stat);
```

## Parameters

StID	station ID
Stat	required station status

## Description

The function sets a station status. To keep a station status, which is set by this calling, all protocol DLL callings (mainly [ReadAllPoints](#), [ReadPointValue](#), [WritePointValue](#), etc.) must return the status RQ\_IGNORED. This status does not change a station status.



Related pages:

[D2000 KomAPI - call-back functions](#)