

# ChangeLineMode

## Declaration

```
void (_stdcall *ChangeLineMode)(HOBJ LnID, unsigned int LineMode);
```

## Parameters

|          |                                               |
|----------|-----------------------------------------------|
| LineID   | <a href="#">Line</a> ID.                      |
| LineMode | Required line mode within the range of 1...4. |

## Description

The function sets the required mode of given asynchronous line. The function can only be used for [Serial](#) or [MOXA IP Serial Library](#) line category and override the line mode setting on the station.



### Related pages:

[D2000 KomAPI - call-back functions](#)