

StPerf_IncRetryErr

Declaration

```
void (_stdcall *StPerf_IncRetryErr)(HOBJ StID)
```

Parameters

StID	Station ID .
------	------------------------------

Description

The function increments the number of errors of operation retry on the given [Station](#).



Related pages:

[D2000 KomAPI - call-back function](#)