

# StructRowStatMAX

## %StructRowStatMAX function

### Function

The function returns the maximum value of all values of the row of the structured variable.

### Declaration

```
REAL %StructRowStatMAX(  
    in StructVar[row]^Column,  
    INT in num_cols  
)
```

### Parameters

<b>StructVar</b>	Structured variable.
<b>Column</b>	Column of the structured variable.
<b>num_cols</b>	Number of columns, which are included in calculation. If the parameter is < 0, then all columns from the column defined by the parameter <i>Column</i> will be included in the calculation.

### Example

```
%StructRowStatMAX(SV.Structure^Int, 2)
```



Related pages:

[Implemented functions](#)

[Function arguments - types](#)