

# StructRowStatMIN

## %StructRowStatMIN function

Function

The function returns the minimum values of all values of the row of the structured variable.

Declaration

```
REAL %StructRowStatMIN(  
    in StructVar[row]^Column,  
    INT in num_cols  
)
```

Parameters

Stru ctVar	Structured variable.
Colu mn	Column of the structured variable.
num _cols	Number of columns, which are included in calculation. If the parameter is < 0, then all columns from the column defined by the parameter <i>Column</i> will be included in calculation.

Example

```
%StructRowStatMIN(SV.Structure^Int, 2)
```



Related pages:

- [Implemented functions](#)
- [Function arguments - types](#)