

Client and Server Event

Client and Server Event is, analogous to [Server Event](#), **started automatically**:

- after starting its parent (process [D2000 Event Handler](#)),
- after saving the event while its parent (**D2000 Event Handler**) is running,
- after calling the action [OPENEVENT](#).

The automatic start is activation of the [initialization part of both Local and Remote script](#). After their termination, both of scripts remain in the state Running and "waits" for events, that activate the handling procedure.

The events can be generated:

- Value change of the monitored object. Value monitoring is controlled by the action [ON CHANGE](#).
- [Remote procedure call](#) of the event.
- [Procedure call](#) between Local script and Remote one.



Related pages:

[Events](#)

[Start conditions](#)

[Events - configuration dialog box](#)