

ColumnAvg

%ColumnAvg function

Function	The function returns the average of the valid values in the specified structure variable column. Result is a real number.				
Declaration	REAL %ColumnAvg(in StructVar ^ Column)				
Parameters	<table><tr><td>StructVar</td><td>Object of Structured variable type.</td></tr><tr><td>Column</td><td>Column name.</td></tr></table>	StructVar	Object of Structured variable type.	Column	Column name.
StructVar	Object of Structured variable type.				
Column	Column name.				
Note	The function sets the user values as a sum for resulting value				
Example	%ColumnAvg(SV.Structure^Int)				



Related pages:

- [Implemented functions](#)
- [Function arguments - types](#)