

MessageBox

Declaration

```
void (_stdcall *MessageBox)(char *Title, char *Message);
```

Parameters

Title	Message box titlebar.
Message	Text to be displayed in the message box.

Description

The function displays a system message box with defined titlebar and text. Warning: The line is to be stopped until the message box is cancelled.



Related pages:

[D2000 KomAPI - call-back functions](#)