

# ChangeLineMode

## Declaration

```
void (_stdcall *ChangeLineMode)(HOBJ LnID, unsigned int LineMode);
```

## Parameters

LnID	Line ID.
LineMode	Required line mode within the range of 1...4.

## Description

The function sets the required mode of given asynchronous line. The function can only be used for **ASYNC** line category and override the line mode setting on the station.



Related pages:

[D2000 KomAPI - call-back functions](#)