

HI_SetPictureWindowState

%HI_SetPictureWindowState, %HI_GetPictureWindowState functions

Function

The function **%HI_SetPictureWindowState** changes the state of picture window.

The function **%HI_GetPictureWindowState** gets the state of picture window.

Declaration

```
%HI_SetPictureWindowState(  
    INT in _newWinState  
)
```

```
%HI_GetPictureWindowState()
```

Parameters

| | |
|---------------------------|---|
| <code>_newWinState</code> | 0 - cancels the maximized or minimized picture window 1 - maximizes the picture window 2 - minimizes the picture window |
|---------------------------|---|

Description

The function **%HI_SetPictureWindowState** changes the state of picture window into maximized, minimized or cancels the used status.

The function **%HI_GetPictureWindowState** gets the state of picture window. It is a number from the range of 0-2. The meaning is following:

- 0 - normal, the picture window is neither maximized or minimized
- 1 - picture window is maximized
- 2 - picture window is minimized

Example

```
%HI_SetPictureWindowState(1)
```

```
_i := %HI_GetPictureWindowState()
```



Related pages:

- [Active picture manipulation functions](#)
- [Function arguments - types](#)