

HI_SetLineWidth

%HI_SetLineWidth function

Function

The function sets the line-width from the script. It is important for objects that are not in zoom mode.

Declaration

```
%HI_SetLineWidth(  
    INT in refId,  
    INT in _width  
)
```

Parameters

refId	Reference to displayer (reference variable).
width	Line-width.



Related pages:

[Active picture manipulation functions](#)

[Function arguments - type](#)