

HI_SetLayoutManagement

%HI_SetLayoutManagement function

Function

The function changes the settings for [layout manager](#) in a graphic object.

Declaration

```
%HI_SetLayoutManagement(  
    INT in _refId,  
    INT in _manageX,  
    INT in _manageY[,  
    BOOL in _zoom]  
)
```


Parameters	<table><tr><td>_refId</td><td>Reference to a graphic object (reference variable).</td></tr><tr><td>_manageX</td><td>Settings for layout manager - X axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)</td></tr><tr><td>_manageY</td><td>Settings for layout manager - Y axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)</td></tr><tr><td>_zoom</td><td>Optional parameter. Settings for layout manager for the zoom parameter. Possible values: - <i>blank</i> - value of zoom parameter does not change - <i>@TRUE</i> - parameter zoom is set to true - <i>@FALSE</i> - parameter zoom is set to false</td></tr></table>	_refId	Reference to a graphic object (reference variable).	_manageX	Settings for layout manager - X axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)	_manageY	Settings for layout manager - Y axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)	_zoom	Optional parameter. Settings for layout manager for the zoom parameter. Possible values: - <i>blank</i> - value of zoom parameter does not change - <i>@TRUE</i> - parameter zoom is set to true - <i>@FALSE</i> - parameter zoom is set to false
_refId	Reference to a graphic object (reference variable).								
_manageX	Settings for layout manager - X axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)								
_manageY	Settings for layout manager - Y axis: 0 - No change 1 - No action 2 - Ratio change 3 - Ratio position 4 - Keep at right margin 5 - Change width 6 - Ratio position (center)								
_zoom	Optional parameter. Settings for layout manager for the zoom parameter. Possible values: - <i>blank</i> - value of zoom parameter does not change - <i>@TRUE</i> - parameter zoom is set to true - <i>@FALSE</i> - parameter zoom is set to false								

Description

The function changes the settings for layout manager in a graphic object.

Example

```
%HI_SetLayoutManagement(_refId, 2, 2)
```

 **Related pages:**

[Active picture manipulation functions](#)
[Function arguments - types](#)
[Layout manager](#)