

HI_SetTextLimit

%HI_GetTextLimit, %HI_SetTextLimit functions

Function

The function **%HI_SetTextLimit** sets the maximum number of characters to enter in Windows control of [Text entry field](#) or [List box](#) types ([control function](#)).

The function **%HI_GetTextLimit** retrieves the maximum number of characters to enter in Windows control of [Text entry field](#) or [List box](#) types.

Declaration

```
%HI_SetTextLimit(
    INT in refId,
    INT in maxNrChars,
)

IN INT %HI_GetTextLimit(
    INT in refId
)
```

Parameters

refId	Reference to Windows control of Text entry field or List box types (reference variable).
maxNrChars	Maximum number of characters to enter.

Note

The parameter [Type](#) in the configuration of Windows control of [List box](#) must be set to the value of *Drop down combo*, otherwise the function returns the value of 0.



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)