

HI_SetColumnVisible

%HI_GetColumnVisible, %HI_SetColumnVisible functions

Functions

The function **%HI_SetColumnVisible** sets a visibility of specific column in [Browser](#) or [Logging](#) displayer.

The function **%HI_GetColumnVisible** finds out a visibility of specific column in [Browser](#) or [Logging](#) displayer.

Declaration

```
%HI_SetColumnVisible(  
    INT in refId,  
    INT in index,  
    BOOL in bVisible  
)  
  
BOOL %HI_GetColumnVisible(  
    INT in refId,  
    INT in index  
)
```

Parameters

refId	Reference to displayer (reference variable).
index	Consecutive number of the column.
bVisible	Column visibility.

Description

In [Browser](#), the columns are configured in **D2000 CNF**, but in [Logging](#), the sequence of columns is following:

Sequential numbers of [Logging](#) column:

1. Name
2. Description
3. Event_rising_time
4. User
5. Old_value
6. New_value
7. Priority
8. Incident
9. Log_type



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)