

HI_SetColumnText

%HI_GetColumnText, %HI_SetColumnText functions

Functions

The function **%HI_SetColumnText** sets the column header of the specified displayer of [Browser](#) or [Logging](#) type.

The function **%HI_GetColumnText** gets the column header of the specified displayer of [Browser](#) or [Logging](#) type ([control function](#)).

Declaration

```
%HI_SetColumnText(
    INT in refId,
    INT in index,
    TEXT in descript
)

TEXT %HI_GetColumnText(
    INT in refId,
    INT in index
)
```

Parameters

refId	Reference to graphic object (reference variable).
index	Serial number of row.
descript	Column header.

Description

In Browser, the columns are configured in **D2000 CNF**, but in Logging, the sequence of columns is following:

Sequential numbers of Logging column:

1. Name
2. Description
3. Event_rising_time
4. User
5. Old_value
6. New_value
7. Priority
8. Incident
9. Log_type



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)