

# HI\_ReportStrPar

## %HI\_ReportStrPar function

### Function

The function **%HI\_ReportStrPar** sets the text parameter of the displayer of Report type ([Control function](#)).

### Declaration

```
%HI_ReportStrPar(  
    INT in refId,  
    TEXT in param1  
)
```

### Parameters

<b>refId</b>	Reference to graphic object ( <a href="#">reference variable</a> ).
<b>param1</b>	Text parameter.

### Description

The function sets the text parameter of the report defined by the reference variable *refId*.

### Note

The report parameter can be also defined by right-clicking the report and select the item **Parameters**. In the displayed dialog box set required values and click the button **OK**.

For detailed description of the report parameters see the topics [D2000 WorkBook](#), [CrystalReport](#).



### Related pages:

[Graphic object manipulation functions](#)  
[Function arguments - types](#)