

HI_HideColumn

%HI_HideColumn function

Function

The function **%HI_HideColumn** allows to hide/show the column in the display of **Browser** type ([Control function](#)).

Declaration

```
%HI_HideColumn(  
    INT in refId,  
    INT in index,  
    BOOL in bHide  
)
```

Parameters

refId	Reference to graphic object (reference variable).
index	Serial number of the column.
bHide	@True- hide the column. @False - show the column.



Related pages:

[Graphic object manipulation functions](#)
[Function arguments - types](#)