

HI_IDispRelease

%HI_IDispRelease function

Function

The function releases the given interface.

Declaration

```
%HI_IDispRelease(  
    INT in IDispAddr  
)
```

Parameters

IDispAddr	IDispatch interface address.
------------------	------------------------------

Example

In active picture, there is inserted the ActiveX object of *Microsoft Office Spreadsheet 10* type that is named *_AX_SPR*. The following call

```
INT _addrInterface  
_addrInterface := %HI_GetAXProp(_AX_SPR, "ActiveCell")  
  
; functions of the interface addrInterface are invoked here  
%HI_IDispRelease(_addrInterface)
```



Related pages:

[ActiveX object manipulation functions](#)
[Function arguments - types](#)